



SR-88

USER GUIDE

2016/06/10

Table of Contents

1. SR-88	3
1.1 Specifications.....	3
1.2 Installation.....	3
1.3 Registration.....	3
2. Parameters	4
3. Sequencer	4
4. Features and Settings	5
4.1 Randomizer.....	5
4.2 Global Settings.....	6
4.3 Filter.....	6
5. End	7
5.1 Credits.....	7
5.2 EULA.....	7
5.3 Thank You.....	7

1. SR-88

SR-88 is a sample-based plugin emulation of the *Sound Master Memory Rhythm SR-88*, a rare analog drum machine from the 80s.

The instrument features 5 classic analog sounds: Kick, Snare, Hi Hat 1, Hi Hat 2, and Cymbal, which can be pitched, panned or mixed independently. You can additionally shape the sound with the Low Pass Filter (Zero Delay Feedback), Overdrive, Compressor and Reverb. The sequencer lets you easily build patterns that can be dragged and dropped to your DAW/host.

1.1 Specifications

- 5 classic analog drum sounds
- 15 Factory Presets / 15 Factory Patterns
- Lowpass filter, Overdrive, Compressor, and Reverb Effects
- Sequencer with Midi Drag to DAW
- Preset system with randomizer
- Formats: VST, AU, and AAX (32/64bit)
- Platforms: OSX, Windows

1.2 Installation

OSX

- Double click on the DMG image *SR-88.dmg*
- Right click on the package *SR-88.pkg* and click open
- Follow the instructions to install the plug-in(s)

Windows

- Extract *SR-88.rar*
- Run *SR-88.exe*
- Follow the instructions to install the plug-in(s)


1.3 Registration

In demo mode the plugin will output silence for 3 seconds every 30 seconds.

To register it, you should have a valid license file (*sr88_license.atl*).

Click on the *More* button and then choose *Registration*.

A popup window will open, click on *Load License File...* and locate your license file (*sr88_license.atl*).

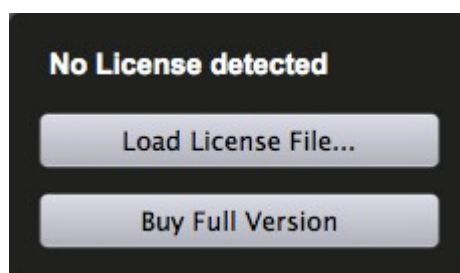

2. Parameters

For each Channel

<i>Pan</i>	Controls the balance of the sound from left to right
<i>Decay</i>	Controls the decay time of the sound
<i>Pitch</i>	Controls the pitch (and the speed) of the sound from -24 to +24 semitones
<i>Volume</i>	Controls the volume of the channel

Filter

<i>Cutoff</i>	Controls the frequency of the low pass filter
<i>Resonance</i>	Controls the resonance/emphasis of the low pass filter

Effects

<i>Drive</i>	Controls the amount of overdrive wet signal
<i>Reverb</i>	Controls the amount of the Plate Reverb wet signal
<i>Compressor</i>	Controls the amount of compression to apply
<i>Master Gain</i>	Controls the volume of the entire instrument

3. Sequencer

The sequencer can be played in three different ways. By default the sequencer will start when your DAW/host is playing (or recording). When you enable the *Start/Stop with Keys*, the sequencer will only start when the selected keys are pressed (default C4 and D4). Alternatively you can also just click on the Play button.

The *Power* button enables or disables the sequencer entirely. The *Play* button turns on when the sequencer starts (or can be used to start it).



The *Patterns* menu lets you load/save, copy/paste, or even randomize the patterns.



The *Tempo* menu allows you to change the speed of the Sequencer.

You can drag and drop the pattern to your DAW as a MIDI region/file by clicking on the *Pattern* button. The sequencer will be automatically powered off, so be careful in live situations.




You can choose to mute or solo each individual channel using the *M* and *S* buttons.



You can build your patterns by clicking (or dragging) the blue squares.


You can also choose the amount of steps for the Sequencer by clicking (or dragging) on the numbers at the top.

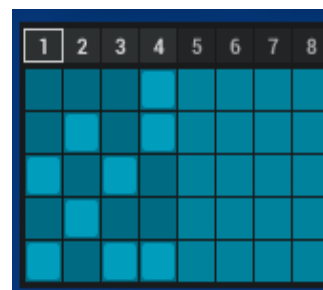

The first button lets you randomize the corresponding track at every sequencer cycle.

The *RND* button lets you randomize the track every time you press it.

The *X* button erases all the track steps.

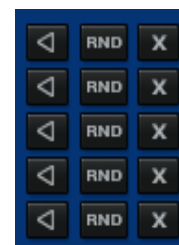

4. Features and Settings

4.1 Randomizer

It is possible to randomize all the parameters in the interface by clicking on the Random button in the top bar.

Right-clicking on a parameter will show the Randomizer menu.



Lock/Unlock Random

Decides if the parameter can be randomized

 
Lock All

No parameters will be randomized

Unlock All

All parameters will be randomized

4.2 Global Settings

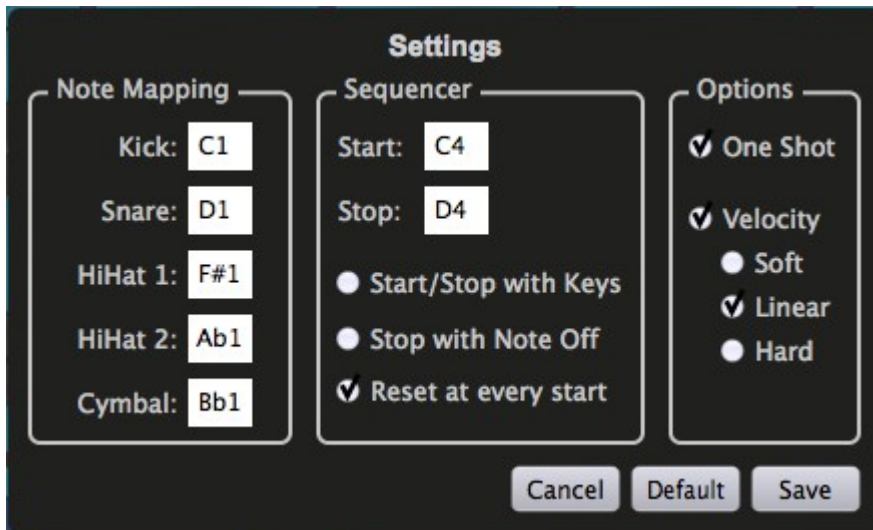

To access the global settings, click on the *More* button and then *Settings*.

You can change the note mapping for each sound, and also for the Start and Stop keys.

If *Start/Stop with Keys* is selected the Sequencer will only start or stop when the selected keys are pressed.

If *Stop with Note Off* is selected, the sequencer will also stop when the Start key is released.

When *Reset at every start* is selected, the sequencer will always re-start from the first step.

If *One Shot* is enabled, the instrument will play the sound until the end, without stopping the envelope

When *Velocity* is enabled, the instrument will respond to MIDI velocity. You can also choose between three velocity curves (soft, linear, hard).

4.3 Filter

The filter is a 12dB/oct Low Pass filter with Zero Delay Feedback. You can choose to disable it by clicking on the *More* button and then deselect *Filter*.

5. End

5.1 Credits

Programming: Carlo Castellano

Design: John Gordon (vstyler)

Special thanks to Mathias Brüssel for his support.

5.2 EULA

Please visit www.audiothing.net/eula to review this product EULA.

5.3 Thank You

Thank you for buying AudioThing SR-88! We hope you will have as much fun using it as we had making this product. For help or any question, feel free to contact us: www.audiothing.net/contact/

